

Position	Part name	Qty
A-1	Limiting Stopper	1
A-2	Foam Pipe	1
A-3	Nut	1
A-4	Cable Fixing Clamp	1
A-5	Brake Cable	1
A-6	Bolt	1
A-7	Rope Guide	1
A-8	Nut	1
A-9	Cable Support	1
A-10	Upper Handle	1
A-11	Lower handle	1
A-12	Bolt	2
A-13	Nut	2
A-14	Handle Plug	2
A-15	Flat Washer	4
A-16	Bolt	4
A-17	Knob	4
A-18	Clutch cabel	1
A-19	Brake Lever	1
A-20	Clutch Lever	1
A-21	Plastic Decoration	1
A-22	Plastic Decoration	1
C-1	Engine	1
C-2	Bolt	3
C-3	Flat Key	1
C-4	Blade adapter	1
C-5	Belt cover	1
C-6	Screw	4
C-7	Belt Cover Plate	1
C-8	Belt Cover Plate	1
C-9	18" Blade	1
C-10	Blade Washer	1
C-11	Blade Bolt	1
C-12	Screw	3
C-13	Engine Cover	1
C-14	Filtering Net Duct of Fuel	1
C-15	Oil Pipe Circlip I	1
D-1	Deck	1
D-2	Rear Cover Pedestal	1
D-3	Screw	2
D-4	Height adjustment plate	1
D-5	Cable Sleeve	1
D-6	Back board	1
D-7	Washing Linker	1
D-8	Screw	10
D-9	Bolt	1

D-10	Flat Washer	1
D-11	Nut	1
D-12	Mulching Plug	1
D-13	Spring	1
D-14	Rear Cover Shaft	1
D-15	Rear cover	1
D-16	Front plate	1
D-17	Front face	1
D-18	Screw	2
D-19	Screw	4
D-20	supporter	1
D-21	Right Bracket	1
D-22	Right Bracket	1
D-23	Bolt	4
D-24	Nut	2
D-25	Side Discharge Bracket	1
D-26	Bolt	2
D-27	Side Discharge Cover Shaft	1
D-28	Spring	1
D-29	Spring	1
D-30	Cover Plate	1
D-31	shaft	1
D-32	Lock Ring	1
D-33	Side Discharge	1
D-34	Side Discharge cover	1
E-1	Height adjustment handle	1
E-2	Screw	1
E-3	Screw	4
E-4	Left shaft sleeve	1
E-5	Right shaft sleeve	1
E-6	Rear wheel shaft	1
E-7	Front wheel shaft	1
E-8	sleeve base	2
E-9	Fixed plate	2
E-10	Bolt	4
E-11	Spring	2
E-12	Split Pin	1
E-13	Nut	1
E-14	Spring Washer	4
E-15	Nut	4
E-16	Inner cover	2
E-17	7inch wheel	2
E-18	7inch wheel	2
E-19	9inch wheel cover	2
E-20	7inch wheel cover	2
E-21	Spring	1
E-22	Pin	2

E-23	Lock Ring	4
E-24	Flat Washer	2
E-25	Left Gear	1
E-26	Right Gear	1
E-27	Gearbox	1
E-28	Belt	1
E-29	Height adjustment connecting Rod	1
F-1	Metal Bracket	1
F-2	Flat Washer	2
F-3	Screw	6
F-4	fixed plate	2
F-5	upper cover	1
F-6	Handle	1
F-7	Indicated Board	1
F-8	Fabric bag	1